

**CHASSIS SECTION**

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

<b>FRONT SUSPENSION</b>	<b>FS</b>
<b>REAR SUSPENSION</b>	<b>RS</b>
<b>WHEEL AND TIRE SYSTEM</b>	<b>WT</b>
<b>DIFFERENTIAL</b>	<b>DI</b>
<b>TRANSFER CASE</b>	<b>TC</b>
<b>DRIVE SHAFT SYSTEM</b>	<b>DS</b>
<b>ABS</b>	<b>ABS</b>
<b>ABS (DIAGNOSTIC)</b>	<b>ABS</b>
<b>BRAKE</b>	<b>BR</b>
<b>PARKING BRAKE</b>	<b>PB</b>
<b>POWER ASSISTED SYSTEM (POWER STEERING)</b>	<b>PS</b>

# PARKING BRAKE

# *PB*

---

	<b>Page</b>
1. General Description .....	2
2. Parking Brake Lever.....	6
3. Parking Brake Cable .....	7
4. Parking Brake Assembly (Rear Disc Brake) .....	8
5. General Diagnostic Table.....	11

# General Description

PARKING BRAKE

---


## 1. General Description

### A: SPECIFICATION

Model	Rear drum brake	Rear disc brake
Type	Mechanical on rear brakes, drum in disc	
Effective drum diameter mm (in)	228.6 (9)	170 (6.69)
Lining dimensions (length×width×thickness) mm (in)	219.4×35.0×4.1 (8.64×1.378×0.161)	163.1×30.0×3.2 (6.42×1.181×0.126)
Clearance adjustment	Automatic adjustment	Manual adjustment
Lever stroke notches/N (kgf, lb)	7 to 8/196 (20, 44)	

## B: COMPONENT

### 1. PARKING BRAKE (REAR DISC BRAKE)

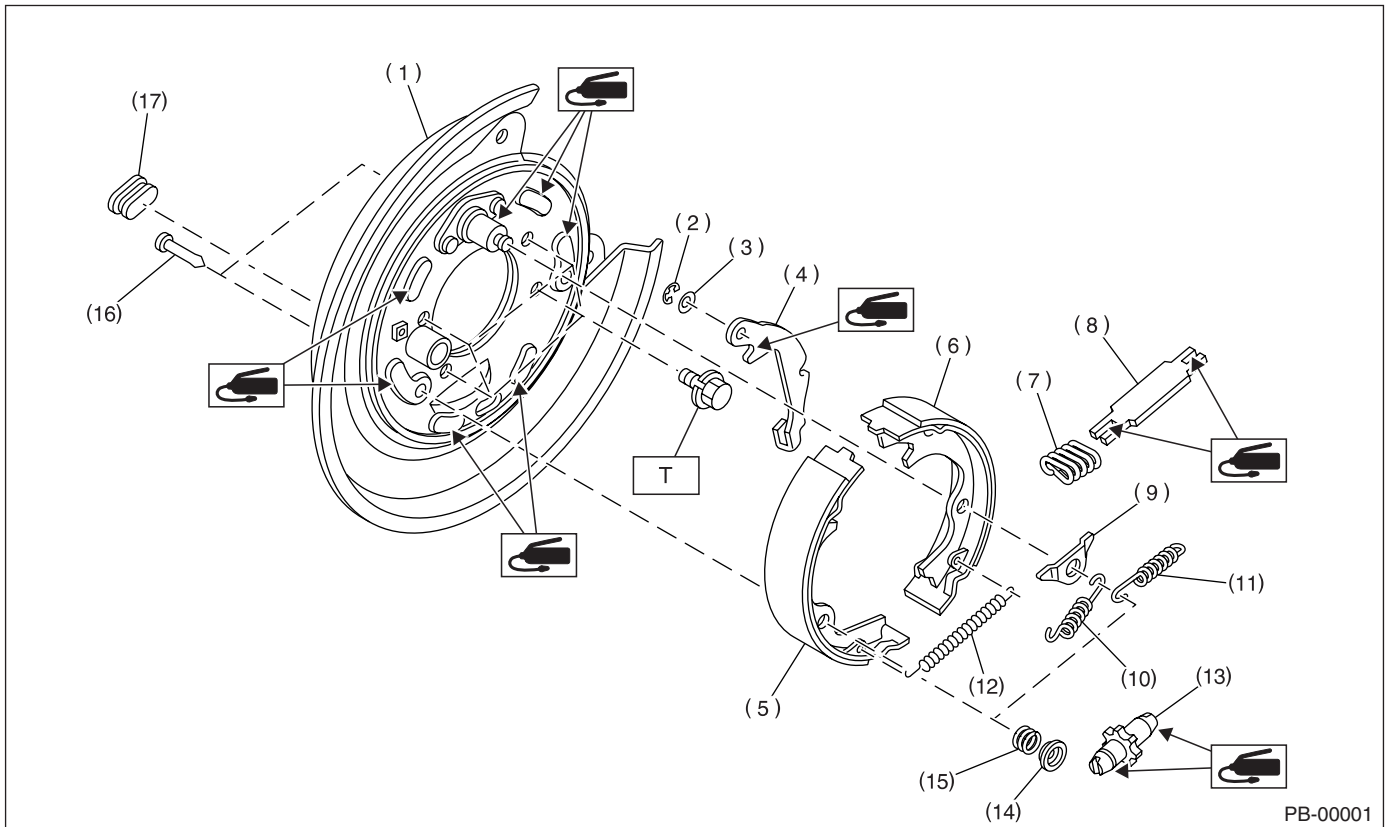

- |                                    |                              |                            |
|------------------------------------|------------------------------|----------------------------|
| (1) Back plate                     | (8) Strut                    | (15) Shoe hold-down spring |
| (2) Retainer                       | (9) Shoe guide plate         | (16) Shoe hold-down pin    |
| (3) Spring washer                  | (10) Primary return spring   | (17) Adjusting hole cover  |
| (4) Lever                          | (11) Secondary return spring |                            |
| (5) Parking brake shoe (Primary)   | (12) Adjusting spring        |                            |
| (6) Parking brake shoe (Secondary) | (13) Adjuster                |                            |
| (7) Strut spring                   | (14) Shoe hold-down cup      |                            |


**Tightening torque: N·m (kgf·m, ft·lb)**

**T: 53 (5.4, 39.1)**

# General Description

## PARKING BRAKE

### 2. PARKING BRAKE CABLE

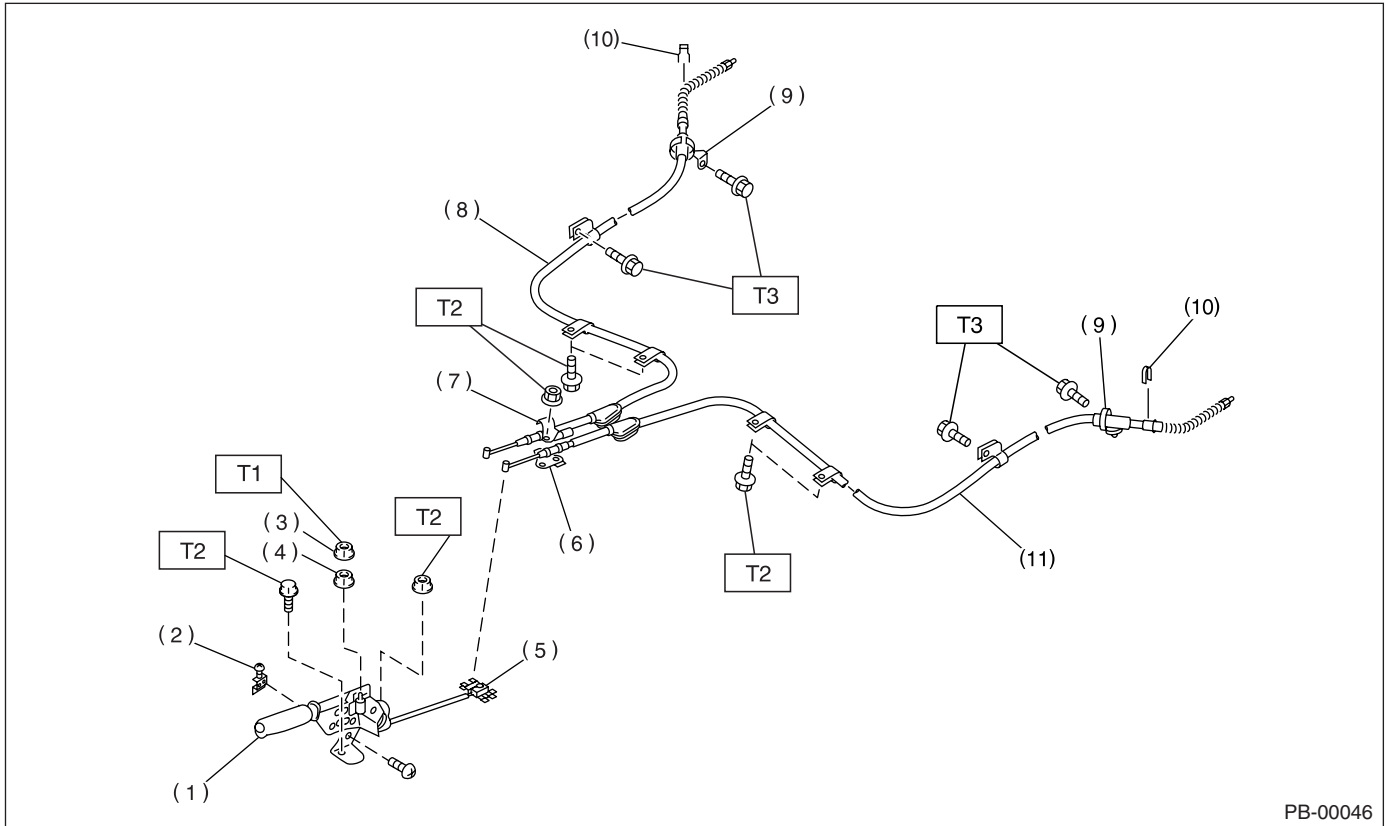

PB-00046

- |                          |   |
|--------------------------|---|
| (1) Parking brake lever  | (7) Clamp                               |
| (2) Parking brake switch | (8) Parking brake cable RH              |
| (3) Lock nut             | (9) Cable guide                         |
| (4) Adjusting nut        | (10) Clamp (Rear disc brake model only) |
| (5) Equalizer            | (11) Parking brake cable LH             |
| (6) Bracket              |   |

**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 6 (0.6, 4.3)**

**T2: 18 (1.8, 13.0)**

**T3: 32 (3.3, 23.6)**

### **C: CAUTION**

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
- Keep grease etc. away from parking brake shoes.


# Parking Brake Lever

## PARKING BRAKE


### 2. Parking Brake Lever

#### A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Remove the rear tire and wheel.
- 3) Remove the rear seat cushion.
- 4) Remove the console box.
- 5) Loosen the parking cable adjusting nut and console bracket.
- 6) Disconnect the connector of parking brake switch.
- 7) Remove the parking brake lever.

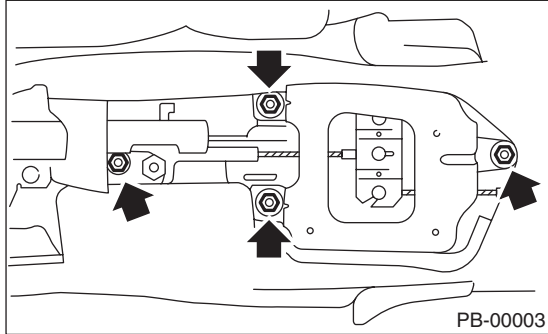

- 8) Unbend the parking brake lever pawls and remove cable.

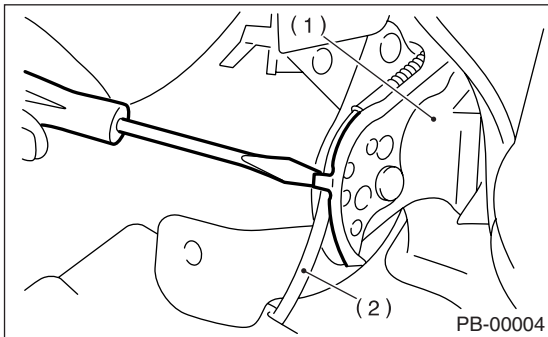

- (1) Parking brake lever
- (2) Cable

#### B: INSTALLATION

- 1) Install in the reverse order of removal.

##### Tightening torque:

##### **Parking brake lever;**

**18 N·m (1.8 kgf·m, 13.0 ft·lb)**

##### **Adjusting nut;**

**6 N·m (0.6 kgf·m, 4.3 ft·lb)**

- 2) Be sure to adjust the lever stroke. <Ref. to PB-6, ADJUSTMENT, Parking Brake Lever.>

#### C: INSPECTION

While pulling the parking brake lever upward, count the notches.

##### **Lever stroke:**

**7 to 8 notches when pulled with a force of 196 N (20 kgf, 44 lb)**

If not as specified, adjust the parking brake. <Ref. to PB-10, ADJUSTMENT, Parking Brake Assembly (Rear Disc Brake).>

#### D: ADJUSTMENT


- 1) Remove the console cover.
- 2) Forcibly pull the parking brake lever 3 to 5 times.
- 3) Adjust the parking brake lever by turning adjuster until parking brake lever stroke is set at 7 to 8 notches with operating force of 196 N (20 kgf, 44 lb).
- 4) Tighten the lock nut.

##### **Lever stroke:**

**7 to 8 notches when pulled with a force of 196 N (20 kgf, 44 lb)**

##### **Tightening torque (Lock nut):**

**6 N·m (0.6 kgf·m, 4.3 ft·lb)**

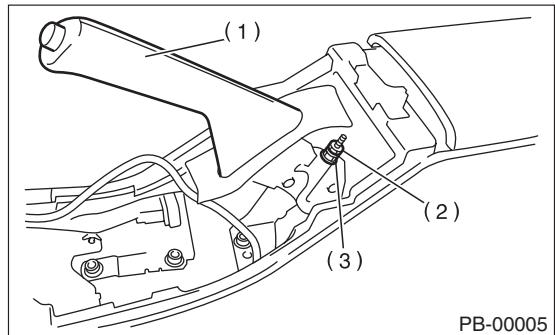


- (1) Parking brake lever
- (2) Lock nut
- (3) Adjusting nut

- 5) Install the console cover.


## 3. Parking Brake Cable

### A: REMOVAL


- 1) Lift-up the vehicle.
- 2) Remove the rear tires and wheels.
- 3) Remove the rear seat cushion.
- 4) Remove the console box.
- 5) Loosen the parking cable adjusting nut and console bracket.
- 6) Remove the parking brake lever.

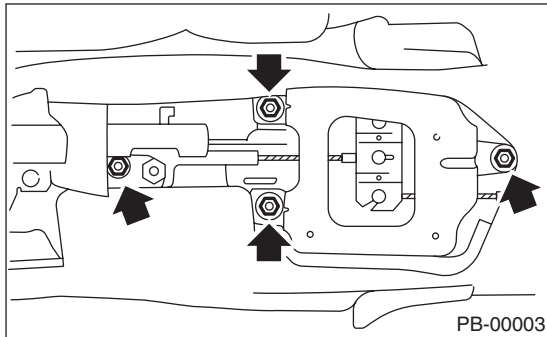

- 7) Roll up the floor mat and remove clamps.

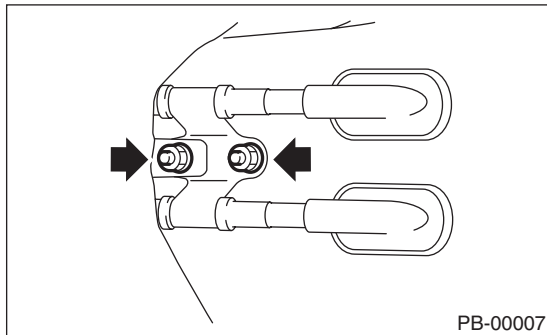

- 8) Remove the equalizer cover.
- 9) Remove the inner cable end from equalizer.

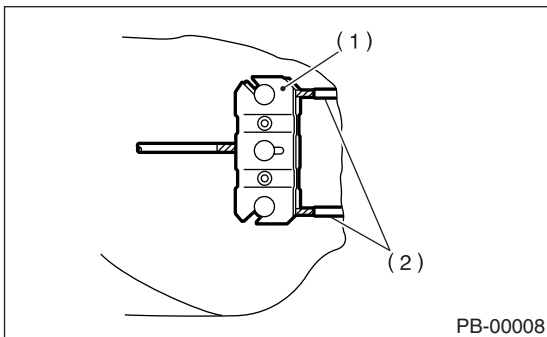

- (1) Equalizer
- (2) Inner cable end

- 10) Remove the parking brake cable from rear brake.


Disc brake

<Ref. to PB-8, REMOVAL, Parking Brake Assembly (Rear Disc Brake).>

Drum brake

<Ref. to BR-32, Rear Drum Brake Assembly.>

- 11) Remove the clamp from rear brake.
- 12) Remove the bolt and bracket from trailing link bracket.
- 13) Remove the bolt and clamp from rear floor.

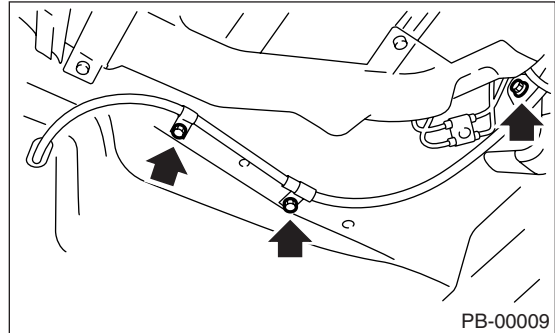

- 14) Detach the grommet from rear floor.
- 15) Remove the cable assembly from cabin by forcibly pulling it backward.
- 16) Detach the parking brake cable from cable guide at rear trailing link.

### B: INSTALLATION

- 1) Install the (new) parking brake assembly in the reverse order of removal.

NOTE:

Be sure to pass the cable through cable guide inside the tunnel.

- 2) Be sure to adjust the lever stroke. <Ref. to PB-6, ADJUSTMENT, Parking Brake Lever.>

### C: INSPECTION

Check the removed cable and replace if damaged, rusty, or malfunctioning.

- 1) Check for smooth operation of the cable.
- 2) Check the inner cable for damage and rust.
- 3) Check the outer cable for damage, bends, and cracks.
- 4) Check the boot for damage, cracks, and deterioration.




# Parking Brake Assembly (Rear Disc Brake)

## PARKING BRAKE

### 4. Parking Brake Assembly (Rear Disc Brake)

#### A: REMOVAL

- 1) Pull down and release the parking brake.
- 2) Remove the two mounting bolts and remove the brake caliper assembly.

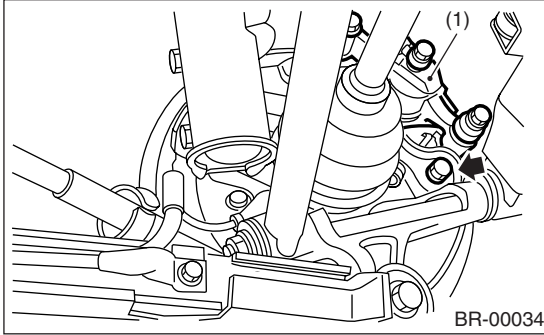


(1) Brake caliper assembly

- 3) Suspend the disc brake assembly so that the hose is not stretched.
- 4) Remove the disc rotor.

#### NOTE:


If the disc rotor is difficult to remove, try the following two methods in order.

- (1) Turn the adjusting screw using a flat tip screwdriver until brake shoe gets away enough from the disc rotor.

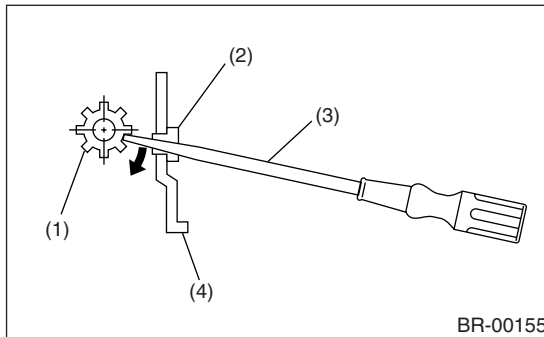


- (1) Adjusting screw
- (2) Adjusting hole cover (rubber)
- (3) Flat tip screwdriver
- (4) Back plate


- (2) If the disc rotor seizes up within hub, drive the disc rotor out by installing two 8-mm (0.31-in) bolt in holes B on rotor.

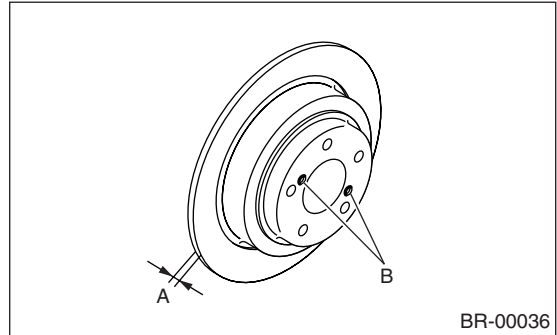

- 5) Remove the shoe return spring from parking brake assembly.
- 6) Remove the front shoe hold down spring and pin with pliers.

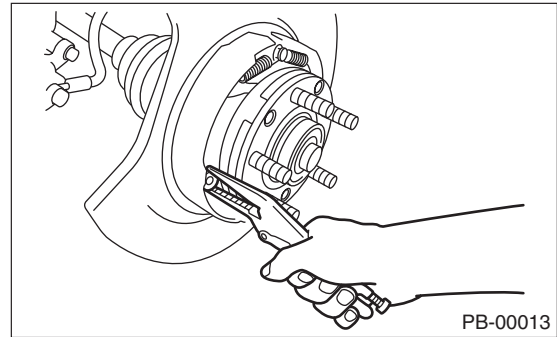

- 7) Remove the strut and strut spring.
- 8) Remove the adjuster assembly from parking brake assembly.
- 9) Remove the brake shoe.
- 10) Remove the rear shoe hold-down spring and pin with pliers.
- 11) Remove the parking brake cable from parking brake lever.

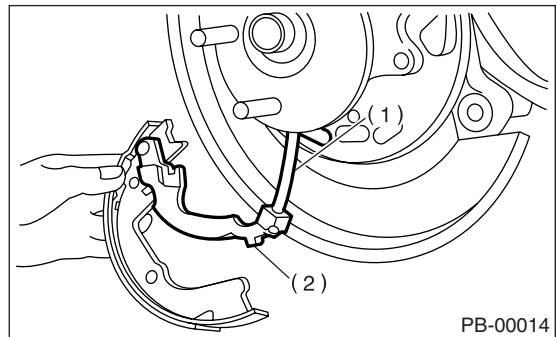

- (1) Parking brake cable
- (2) Parking brake lever

- 12) Using a standard screwdriver, raise the retain-er. Remove the parking brake lever and washer from brake shoe.

## B: INSTALLATION

### CAUTION:


Be sure the lining surface is free from oil and grease contamination.

1) Apply brake grease to the following places.

### Brake grease:

#### Brake Grease (Part No. 003602002)

- Six contact surfaces of shoe rim and back plate packing
  - Contact surface of shoe wave and anchor pin
  - Contact surface of lever and strut
  - Contact surface of shoe wave and adjuster assembly
  - Contact surface of shoe wave and strut
  - Contact surface of lever and shoe wave
- 2) Insert the primary side brake shoe into anchor pin groove.
- 3) Secure the brake shoe with shoe hold-down pin and cup.
- 4) Install the plate to anchor pin, and then assemble the primary return spring to anchor pin.

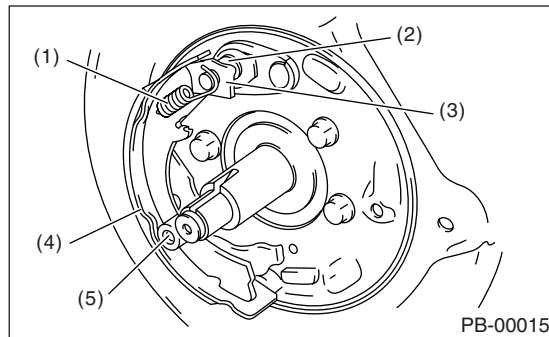

- (1) Primary return spring
- (2) Anchor pin
- (3) Plate
- (4) Primary shoe
- (5) Shoe hold-down pin & cup


5) Install the parking brake cable to parking brake lever.

6) Assemble the strut and adjuster, and then secure the secondary side brake shoe with shoe hold-down pin & cup.

### NOTE:


- Install the strut spring of both right and left wheel facing vehicle front.

- Install the adjuster assembly with screw on left side.

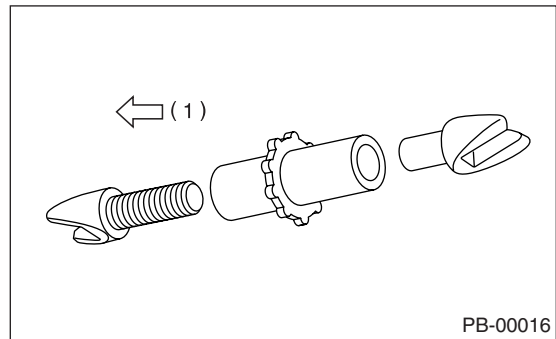

- (1) Left

7) Install the secondary return spring and adjusting spring.

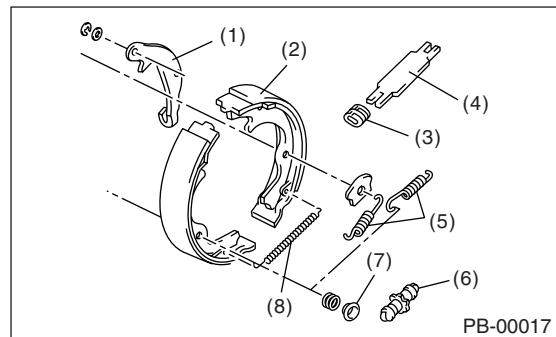

- (1) Lever
- (2) Secondary brake shoe
- (3) Strut spring
- (4) Strut
- (5) Secondary return spring
- (6) Adjuster
- (7) Hold-down cup
- (8) Adjusting spring

8) Adjust the parking brakes. <Ref. to PB-10, ADJUSTMENT, Parking Brake Assembly (Rear Disc Brake).>

9) Drive the vehicle for parking brake lining "break-in".

- (1) Drive the vehicle at about 35 km/h (22 MPH).
- (2) With the parking brake release button pushed in, pull the parking brake lever gently.
- (3) Drive the vehicle for about 200 meter (0.12 mile) in this condition.
- (4) Wait 5 to 10 minutes for the parking brake to cool down. Repeat this procedure once more.
- (5) After breaking-in, re-adjust the parking brakes.

# Parking Brake Assembly (Rear Disc Brake)

## PARKING BRAKE

### C: INSPECTION

1) Measure the brake disc rotor inside diameter. If the disc is scored or worn, replace the brake disc rotor.

#### **Disc rotor inside diameter:**

##### **Standard**

**170 mm (6.69 in)**

##### **Service limit**

**171 mm (6.73 in)**

2) Measure the lining thickness. If it exceeds the limit, replace the shoe assembly.

#### **Lining thickness:**

##### **Standard**

**3.2 mm (0.126 in)**

##### **Service limit**

**1.5 mm (0.059 in)**

#### **NOTE:**


Replace the right and left brake shoe at the same time.

### D: ADJUSTMENT

#### 1. SHOE CLEARANCE

1) Remove the adjusting hole cover from back plate.

2) Turn the adjusting screw using a flat tip screwdriver until brake shoe is in close contact with disc rotor.

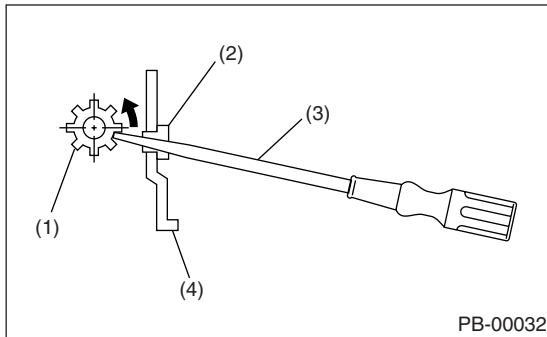

- (1) Adjusting screw
- (2) Adjusting hold cover (rubber)
- (3) Flat tip screwdriver
- (4) Back plate

3) Turn back (downward) the adjusting screw 3 or 4 notches.


4) Install the adjusting hole cover to back plate.

#### 2. LEVER STROKE

1) Remove the console box lid.

2) Forcibly pull the parking brake lever 3 to 5 times.

3) Adjust the parking brake lever by turning adjuster until parking brake lever stroke is set at 7 to 8 notches with operating force of 196 N (20 kgf, 44 lb).

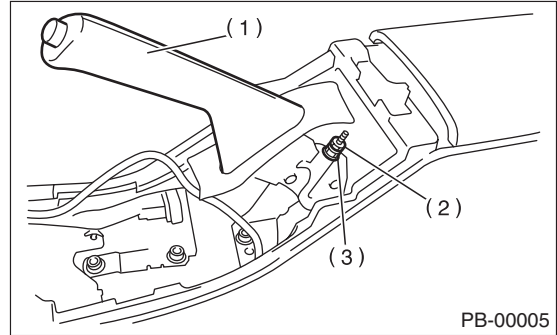

- (1) Parking brake lever
- (2) Lock nut
- (3) Adjusting nut

4) Tighten the lock nut.

5) Install the console box lid.

#### **Lever stroke:**

**7 to 8 notches when pulled with a force of 196 N (20 kgf, 44 lb)**

#### **Tightening torque (Lock nut):**

**6 N·m (0.6 kgf-m, 4.3 ft-lb)**

## 5. General Diagnostic Table

### A: INSPECTION

Symptom	Possible cause	Remedy
Brake drag	Parking brake lever is maladjusted.	Adjustment.
	Parking brake cable does not move.	Repair or replace.
	Parking brake shoe clearance is maladjusted.	Adjustment.
	Return spring is faulty.	Replace.
Noise from brake	Return spring is faulty.	Replace.
	Shoe hold-down spring is faulty.	Replace.

# General Diagnostic Table

PARKING BRAKE

---